

**Q: How can I open the Door?**

**Answer:**

There are four different ways you can open the Door:

1. By Ringing the Intercom (Caller ID)

*The phone number must be on the white list on the Intercom, so by ringing the Intercom the number will be recognised and Door 1 will open.*

2. By inputting a password at the Intercom

*While at the Intercom, enter the password, ie 123456 and then press A to open Door 1 or C to open door 2.*

3. By Texting the Intercom

*Text 123456#44#1# for Door 1  
and 123456#44#2# for Door 2.*

*123456 is the default password for the Intercom 44 is the command and 1 or 2 is the door number. If the password has been changed then use the new password in place of the default one.*

4. When in a call from the Intercom

*When answering a call from the Intercom, press \* on your phone to open door 1 and press # on your phone to open door 2.*

Table below presents a summary of the functionality:

	<b>Open Door 1 (Relay 1)</b>	<b>Open Door 2 (Relay 2)</b>
Calling into Intercom	Door 1 will open	
Enter password	Press Button A after entering the password	Press Button C after entering the password
During a voice call.	Press * on your phone	Press # on your phone
Texting to Intercom	Send 123456#44#1# <small>see note 1</small>	Send 123456#44#2# <small>see note 1</small>

Note 1: 123456 is the default password for the Intercom 44 is the command and 1 or 2 is the door number. If the password has been changed then use the new password in place of the default one.