



## Wiring Diagram

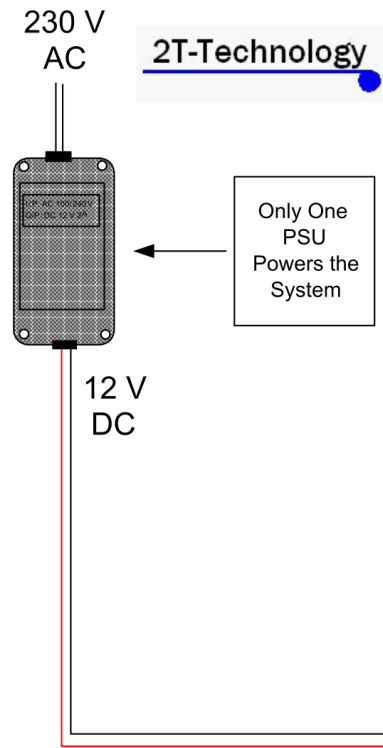

Voyager Mobile Entry - Intercom and Access Control Unit.

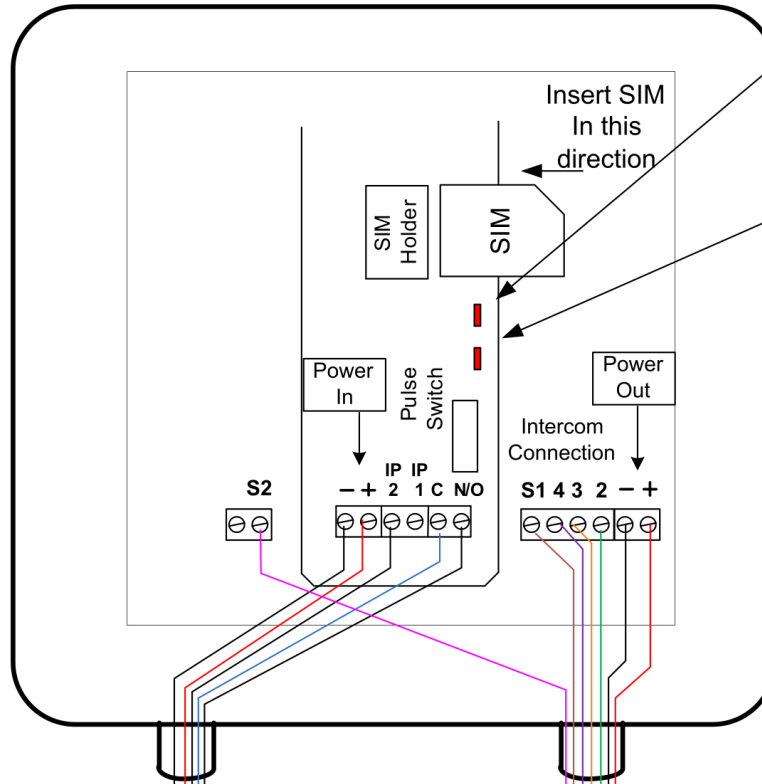

**Register Status.**

1. Off or On Constantly = NOT Registered
2. Flashing every second = Registered.

**Signal Strength.**

1. On Steady: Strong Signal
2. Flashing: Acceptable Signal .
3. Off: Low Signal.

