



Voyager Mobile Entry Intercom(VME-I)

Comelit Style 5

Wiring Diagram

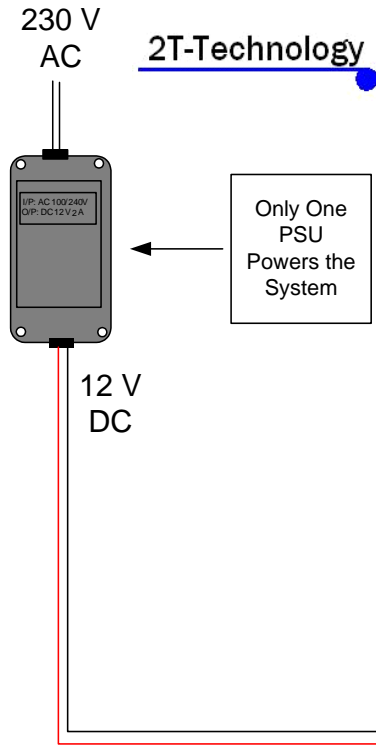

Voyager Mobile Entry - Intercom and Access Control Unit.

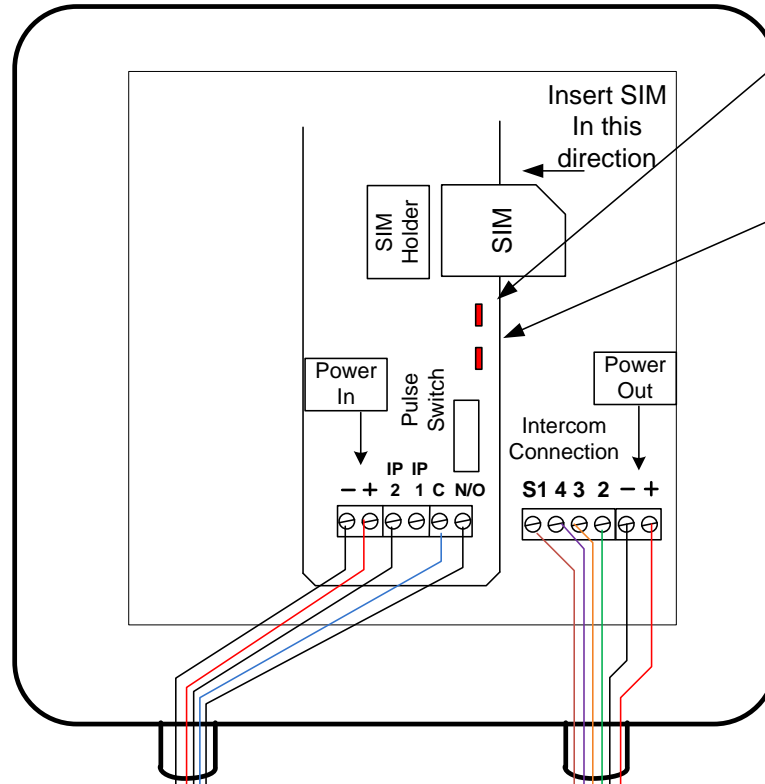


Register Status.

1. Off or On Constantly = NOT Registered
2. Flashing every second = Registered.

Signal Strength.

1. On Steady: Strong Signal
2. Flashing: Acceptable Signal.
3. Off: Low Signal.

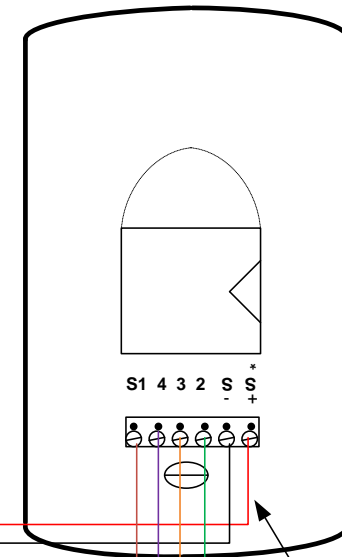

Power In to Intercom

